



OWNER'S MANUAL


Rocker Recliner with Headrest & Lumbar

MOTOMOTION Assembly Instructions for Rocker Recliner

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come lose inside the carton during shipment.

Inside the carton you will find two red plastic bags that have the recliner's wings in them. Remove the wings from the plastic bags and set them aside to be used in assembly and installation.

Make sure to read the instructions below before assembling your rocker recliner.

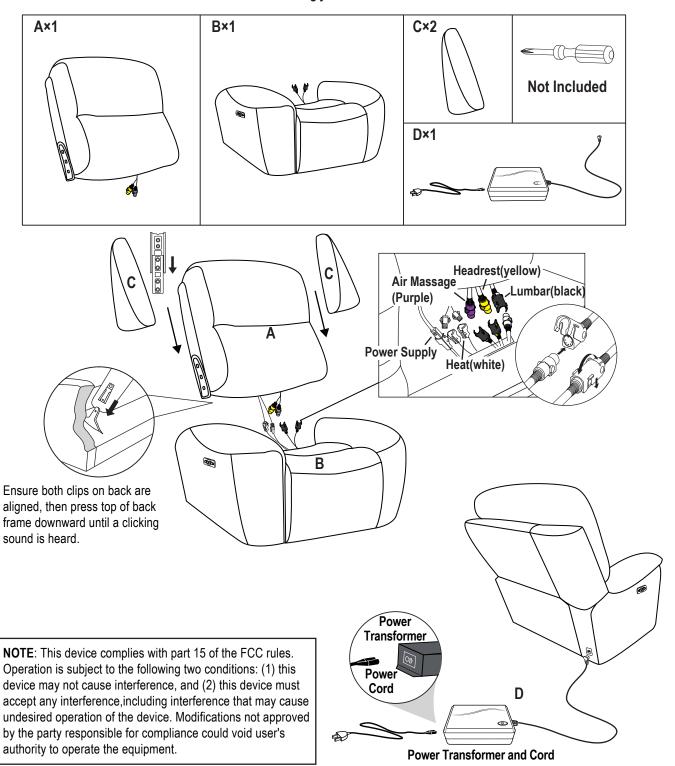


Do Not plug the power cord into a power outlet until your recliner is fully assembled and in place.

- 1) To help prevent shock and or damage to your product only plug the power cord into a grounded outlet.
- 2) Read the operating instructions carefully before operating your rocker recliner.



Operating Instructions for Rocker Recliner

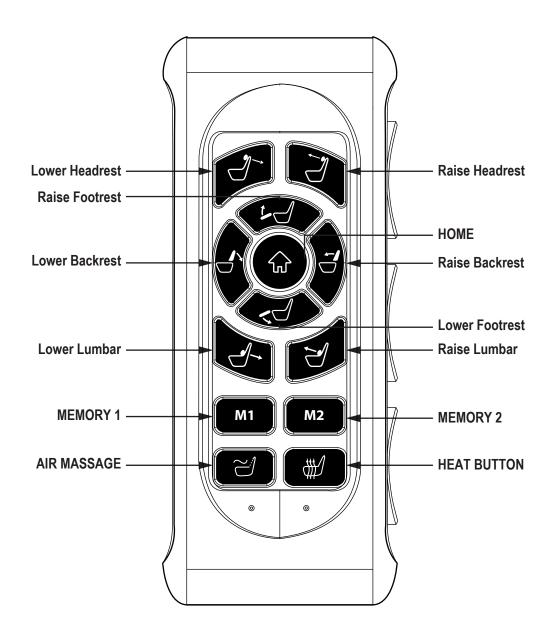

AIR MASSAGE: Press the air massage button to activate air massage function. Press again to cycle intensity through low (light is green), high (light is red), and off (light is off).

When user operates lumbar, will eliminate massage motion if it has been in use.

Massage working time: 20 min.

HEAT BUTTON: Press the heat button to activate heat function. Press again to cycle intensity through low (light is green), high (light is red), and off (light is off).

Heat working time: 30 min.

How to use Memory Function

Press and hold Memory 1 button and Memory 2 button for 3 seconds. The buzzer in the Remote will keep ringing to indicate that the hand control is in "set" mode. Press and hold the desired memory button to set the memory position. The buzzer will ring two times .


To go to a preset Memory 1 & Memory 2 position, press and hold the desired memory button M1 & M2.

How to pair the new remote

Disconnect the power, then Press and hold the "Lower Headrest" button and "Raise Headrest" buttons for 5 seconds, the buzzer in the remote will ring two times. Connect the power, the buzzer in control box will ring three times, and then the remote will ring one time. The pairing is finished.



Operating Instructions for Rocker Recliner

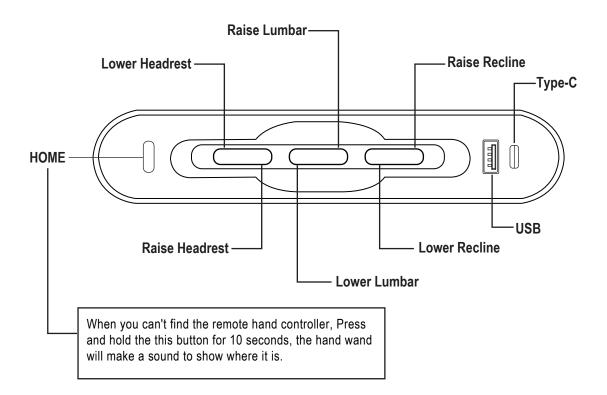



WARNINGS & CAUTIONS

- To avoid injury, use care when assembling.
- Use on level surface.
- Adult supervision when used by children.
- Maximum load 158 kg / 350 lb.
- Exceeding this weight may damage product and cause potential injury.
- For indoor use only.
- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.

Customer Service

If you have any questions regarding the use of this unit, or find that your unit needs service, please contact your retailer.