


ASSEMBLY INSTRUCTIONS

ITEM NO.: 2638/2639-03 & 04


DRAWER DRESSER & RECTANGULAR MIRROR - HANOVER

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIALS CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.

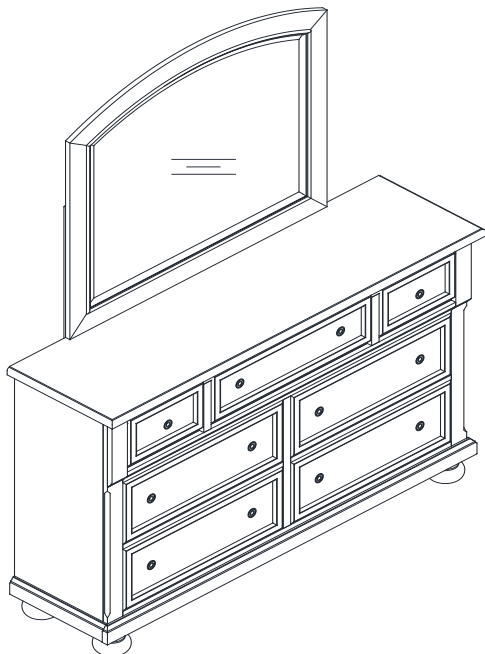






TOOLS REQUIRED (NOT PROVIDED)





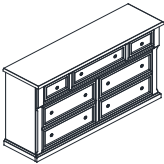

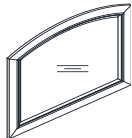PHILLIPS SCREWDRIVER




PARTS LIST:

NO	DESCRIPTION	SKETCH	QTY
A	DRAWER DRESSER		1 PC
B	BUN FEET		4 PCS
C	CENTER SUPPORT LEG		1 PC
D	RECTANGULAR MIRROR		1 PC
E	MIRROR SUPPORT		2 PCS

HARDWARE LIST:

NO	DESCRIPTION	SKETCH	SIZE	QTY
a	Allen Key		4 x 74 x 29mm	1 PC
b	Bolt		5/16" x 11.5 x 32mm	8 PCS
c	Spring Washer		5/16" x 5/16 x 2mm T	8 PCS
d	Flat Washer		5/16" x 5/16 x 2mm T	8 PCS
e	TIPPING RESTRAINT			1 set
f	STRAIGHT ALLEN KEY		4*100mm	1PC

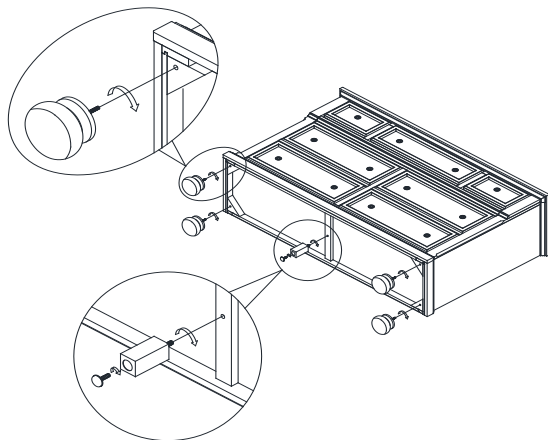

STEP 1: Attach bun feet(B) & center support leg (C) to the bottom of drawer dresser (A).

STEP 2: With another person's assistance, lift the mirror (D) and attach mirror support (E) into position on top of the dresser. Secure the mirror in place by using allen key (a), bolt (b), spring washer (c), flat washer (d).

Important note:

- 1.The furniture tipping restraint is stapled to the back of the dresser.
2. The hardware bag is packed with mirror.

