

ASSEMBLY INSTRUCTIONS

ITEM NO.: 2638/2639-14 DOOR CHEST - HANOVER

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING SHIPMENT.

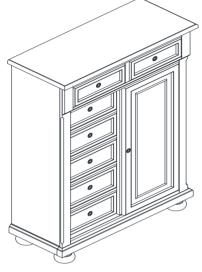



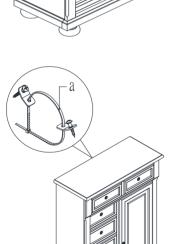


| TOOLS REQUIRED (NOT PROVIDED) | |
|-------------------------------|--|
| PHILLIPS SCREWDRIVER | |

PARTS LIST:

| NO | DESCRIPTION | SKETCH | QTY |
|----|-------------|--------|-------|
| A | DOOR CHEST | | 1 PC |
| В | BUN FEET | | 4 PCS |

HARDWARE LIST:

| NO | DESCRIPTION | SKETCH | SIZE | QTY |
|----|-------------------|--------|------|-------|
| a | TIPPING RESTRAINT | | | 1 set |

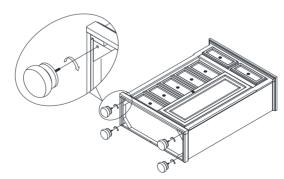

STEP 1: Attach bun feet(B) to the bottom of door chest(A).

Important note:

The furniture tipping restraint is stapled to the back of the unit.

Page 1 of 1 MADE IN VIETNAM