



# IMPORTANT



Keep these instructions for future reference.

To help prevent serious or fatal injuries from entrapment or falls:

- Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
- Use only mattress which is 75 inches long and 37-1/2 - 38-1/2 inches wide on upper bunk. Ensure thickness of mattress does not exceed 8 inches and that mattress surface is at least 5 inches (127 mm) below the upper edge of guardrails.
- Do not allow children under 6 years of age to use the upper bunk.
- Prohibit more than one person on the upper bunk at all times.
- Periodically check and ensure that the guardrails, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- Always use the ladder for entering and leaving the upper bunk.
- Do not use substitute parts. **Contact the manufacturer or dealer for replacement parts.**
- Use of a night light may provide added safety precaution for a child using the upper bunk.
- Always use guardrails on both sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- The use of water or sleep flotation mattresses is prohibited.
- **STRANGULATION HAZARD** - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example: but not limited to - hooks, belts, and jump ropes.

# St. Croix Youth Twin Loft

Model #1987/2229/2230-320 - Headboard & Footboard









Model #1987/2229/2230-321 - Guard Rails & Ladder

Model #1987/2229/2230-352 - Slats • Model #1987/2229/2230-353 - Side Rails

Date: 11-13-2017


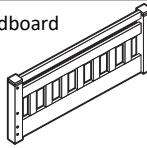

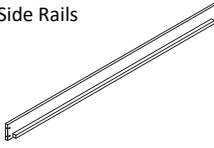
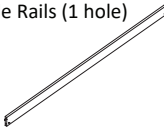



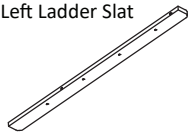
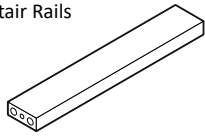
Page 1 of 6


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

CODE	QTY	HARDWARE
1	16	1/4 x 90mm Allen Bolts 
2	8	1/4 x 38mm Allen Bolts 
3	4	1/4 x 30mm Allen Bolts 
4	6	1/4 x 25mm Allen Bolts 
5	16	1/4 x 10 x 13mm Nuts 
6	2	10.5 x 90mm Metal Dowel Pins 
7	28	M4 x 30mm Wood Screws 
8	1	M4 Allen Wrench 

## ⚠ WARNING

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	5 Drawer Chest 	B	1	Headboard 
C	1	Footboard 	D	2	Side Rails 
E	4	Side Rails (1 hole) 	F	2	Support Slats (3 holes) 
G	14	Side Slats 	H	1	Right Ladder Slat 
I	1	Left Ladder Slat 	J	1	Stair Rails 

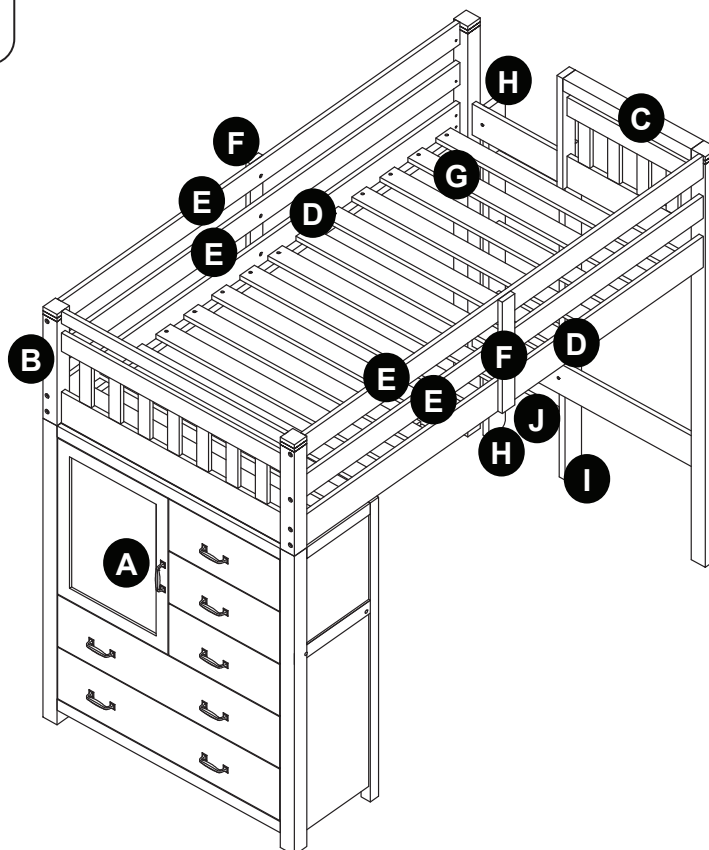


# St. Croix Youth Twin Loft

Model #1987/2229/2230-320 - Headboard & Footboard

Model #1987/2229/2230-321 - Guard Rails & Ladder

Model #1987/2229/2230-352 - Slats • Model #1987/2229/2230-353 - Side Rails

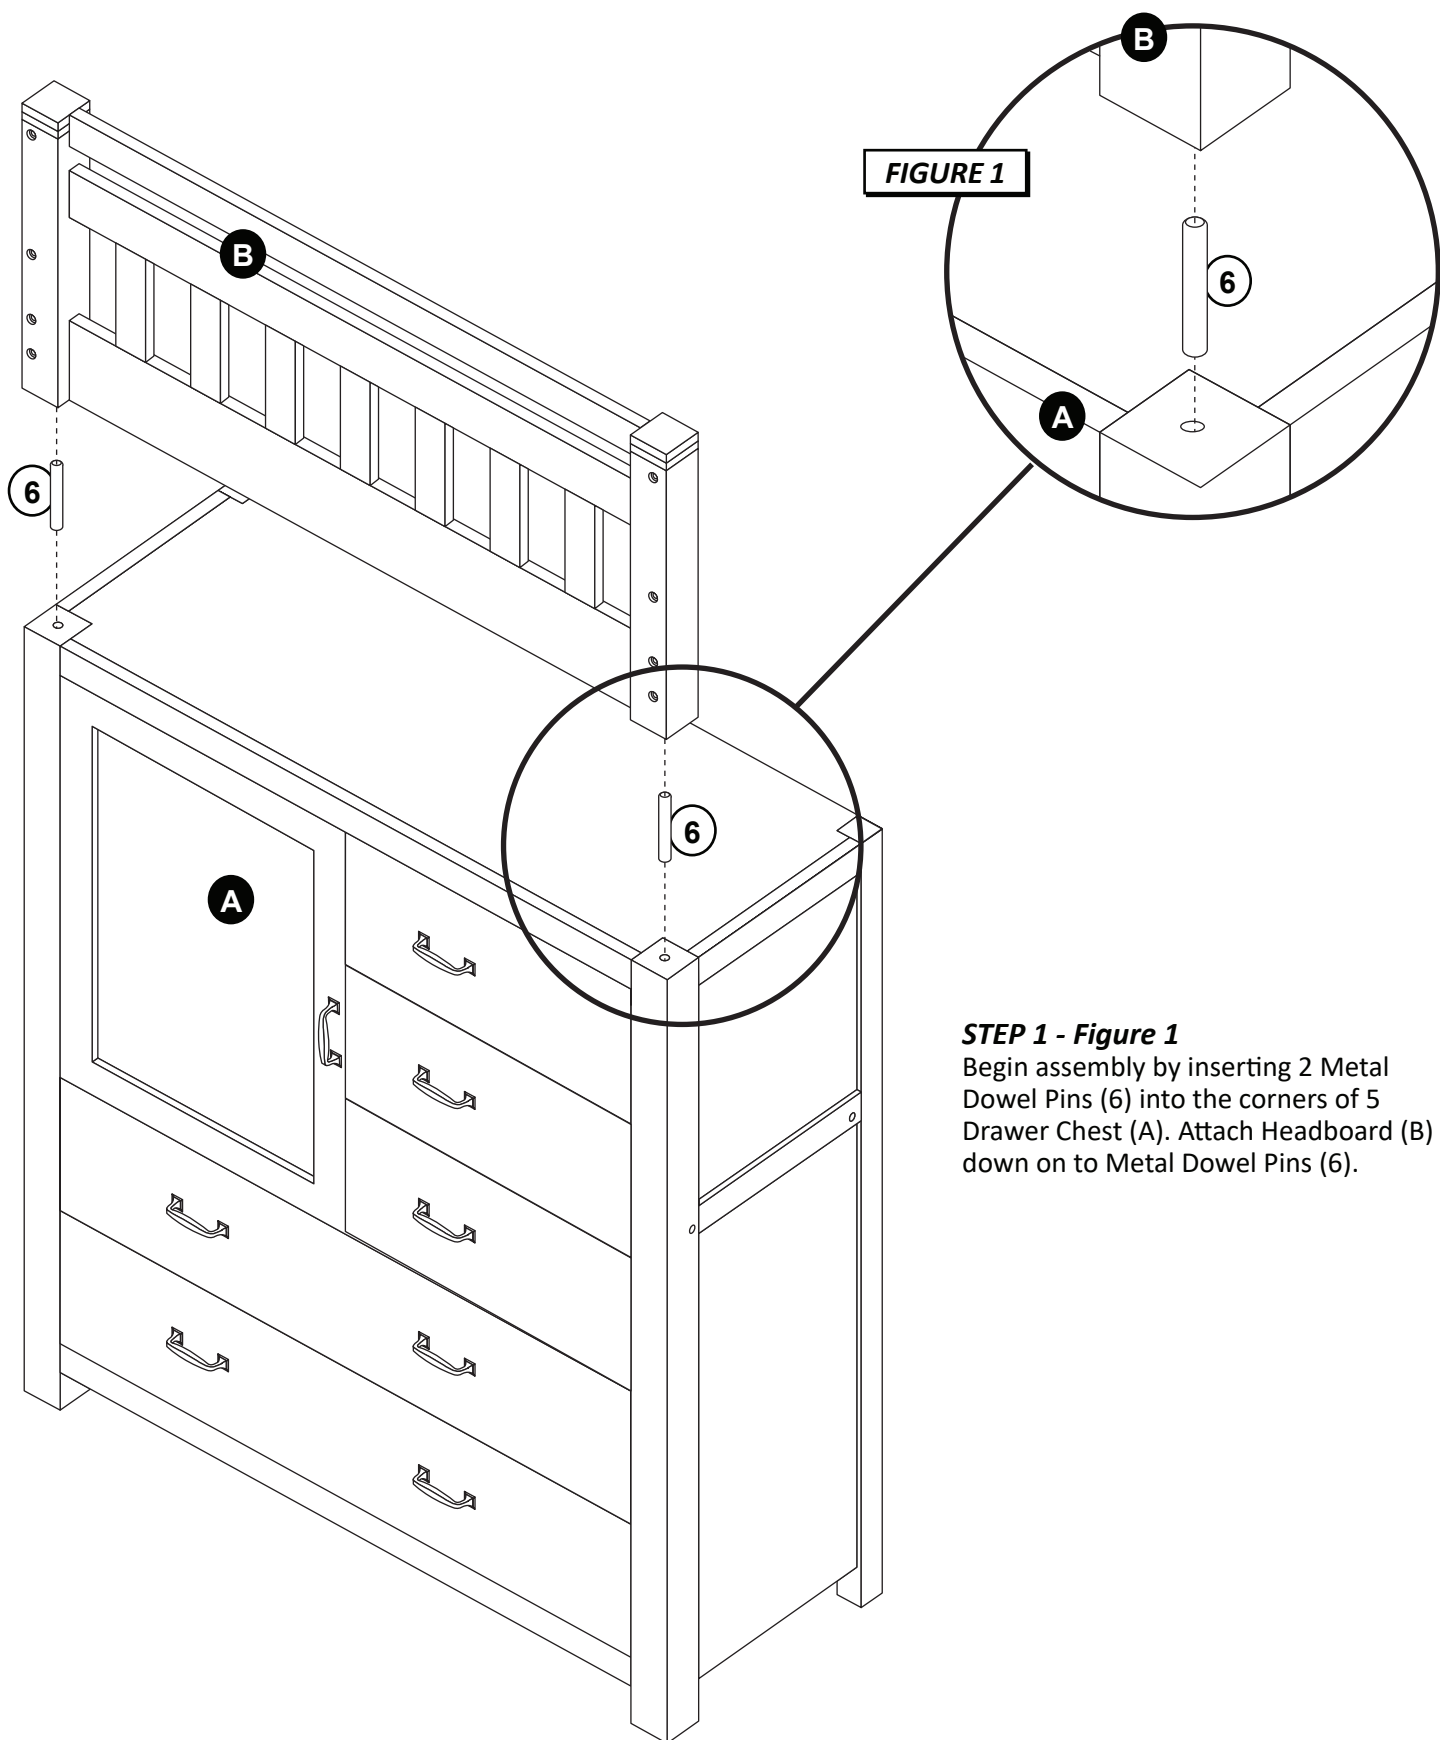

# St. Croix Youth Twin Loft

Model #1987/2229/2230-320 - Headboard & Footboard


Model #1987/2229/2230-321 - Guard Rails & Ladder

Model #1987/2229/2230-352 - Slats • Model #1987/2229/2230-353 - Side Rails

**FIGURE 2**

## STEP 2 - Figure 2

Attach Side Rails (D & E) to Headboard (B) and Footboard (C) using 4 Allen Bolts (1) and 4 Nuts (5) per corner.

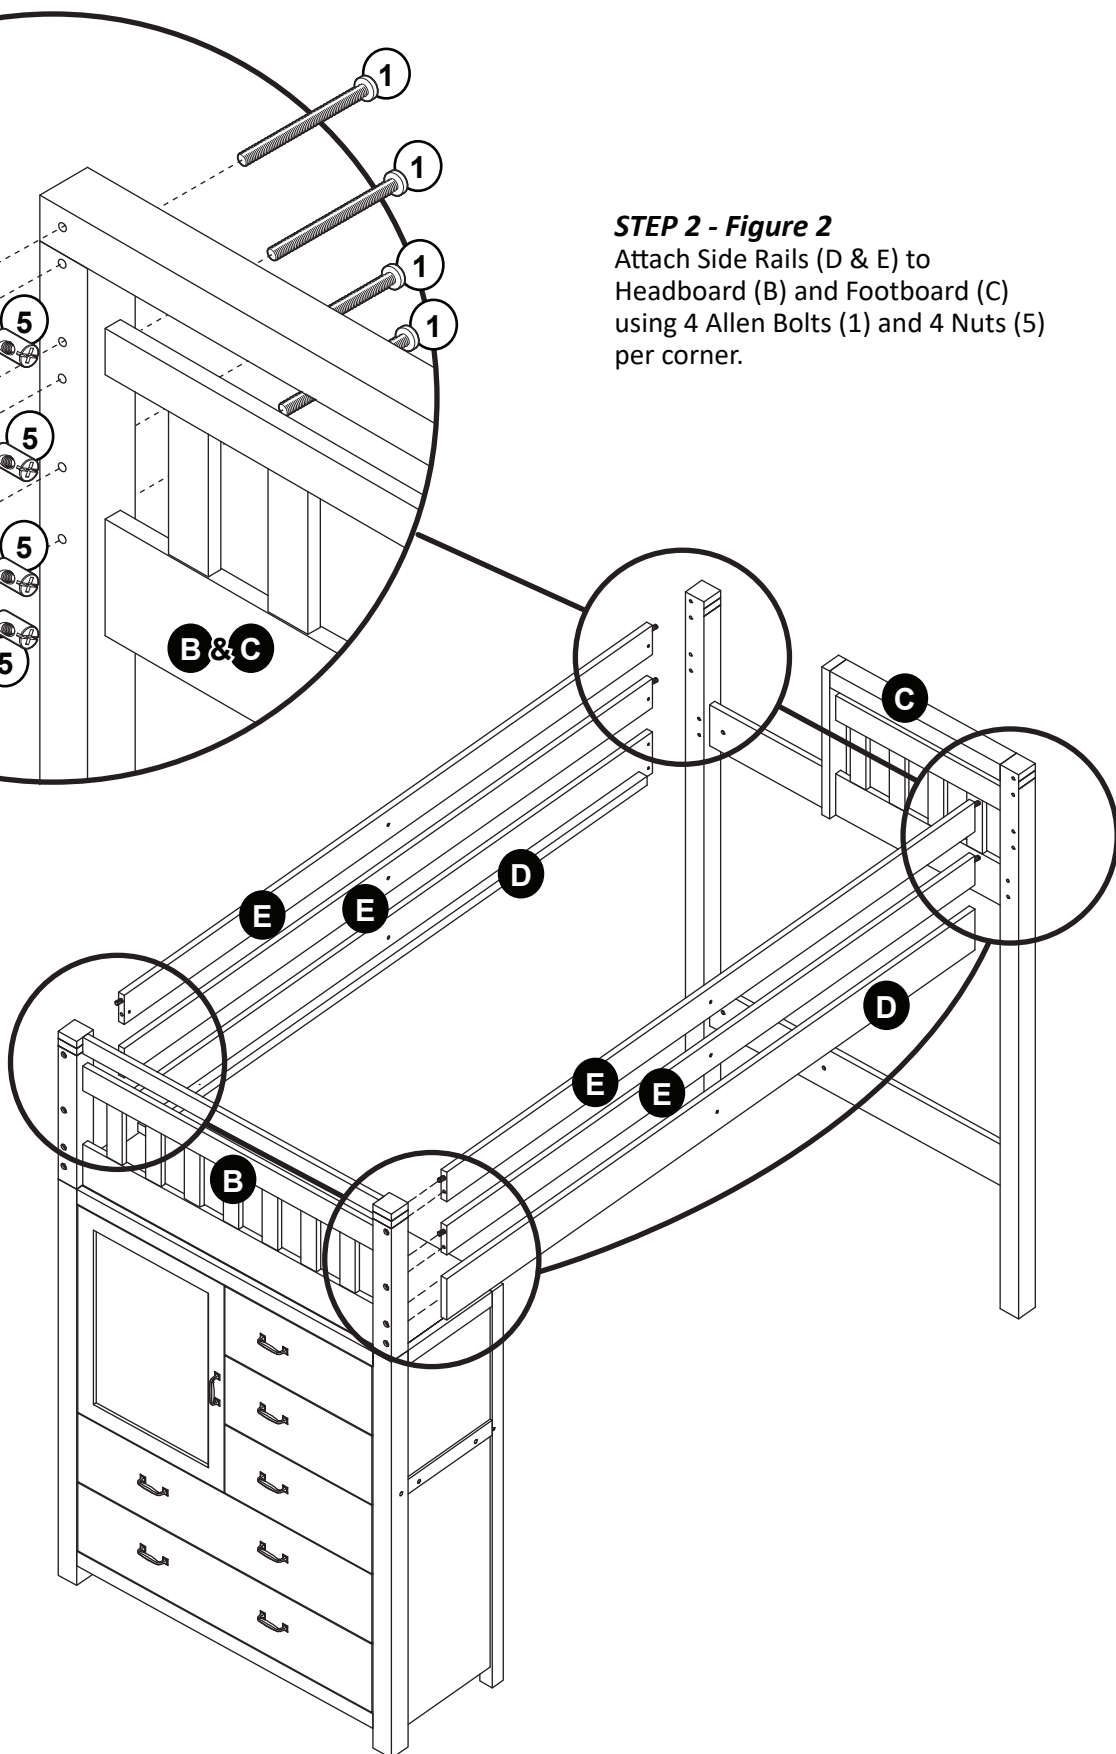

# St. Croix Youth Twin Loft

Model #1987/2229/2230-320 - Headboard & Footboard


Model #1987/2229/2230-321 - Guard Rails & Ladder

Model #1987/2229/2230-352 - Slats • Model #1987/2229/2230-353 - Side Rails

**FIGURE 3**

## STEP 3 - Figure 3

Attach Support Slats (F) to Side Rails (D & E) using 1 Allen Bolt (4) per rail.

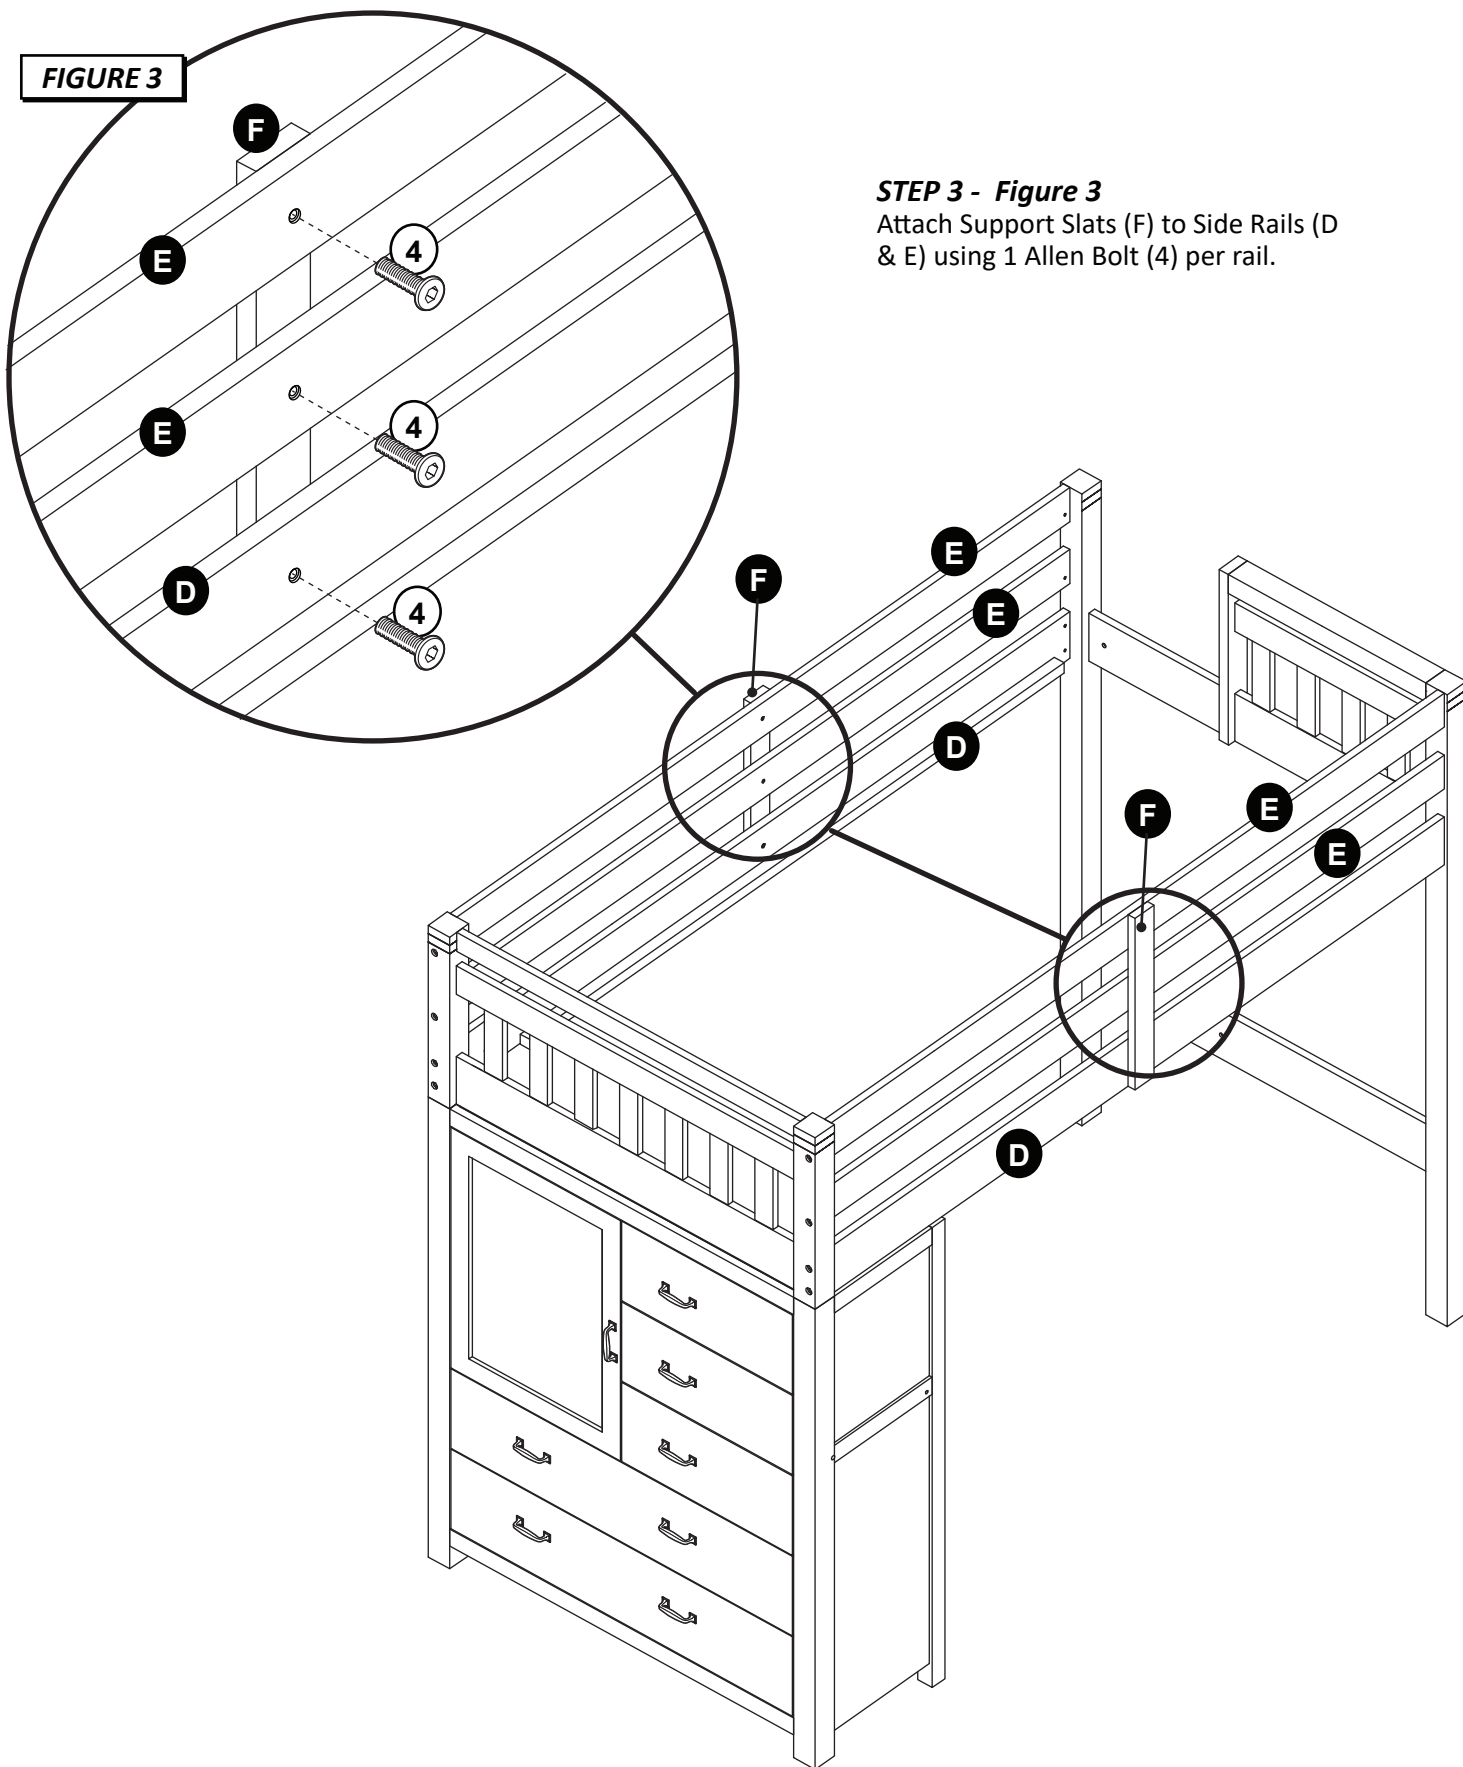

# St. Croix Youth Twin Loft


Model #1987/2229/2230-320 - Headboard & Footboard

Model #1987/2229/2230-321 - Guard Rails & Ladder

Model #1987/2229/2230-352 - Slats • Model #1987/2229/2230-353 - Side Rails

Date: 11-13-2017

Page 5 of 6

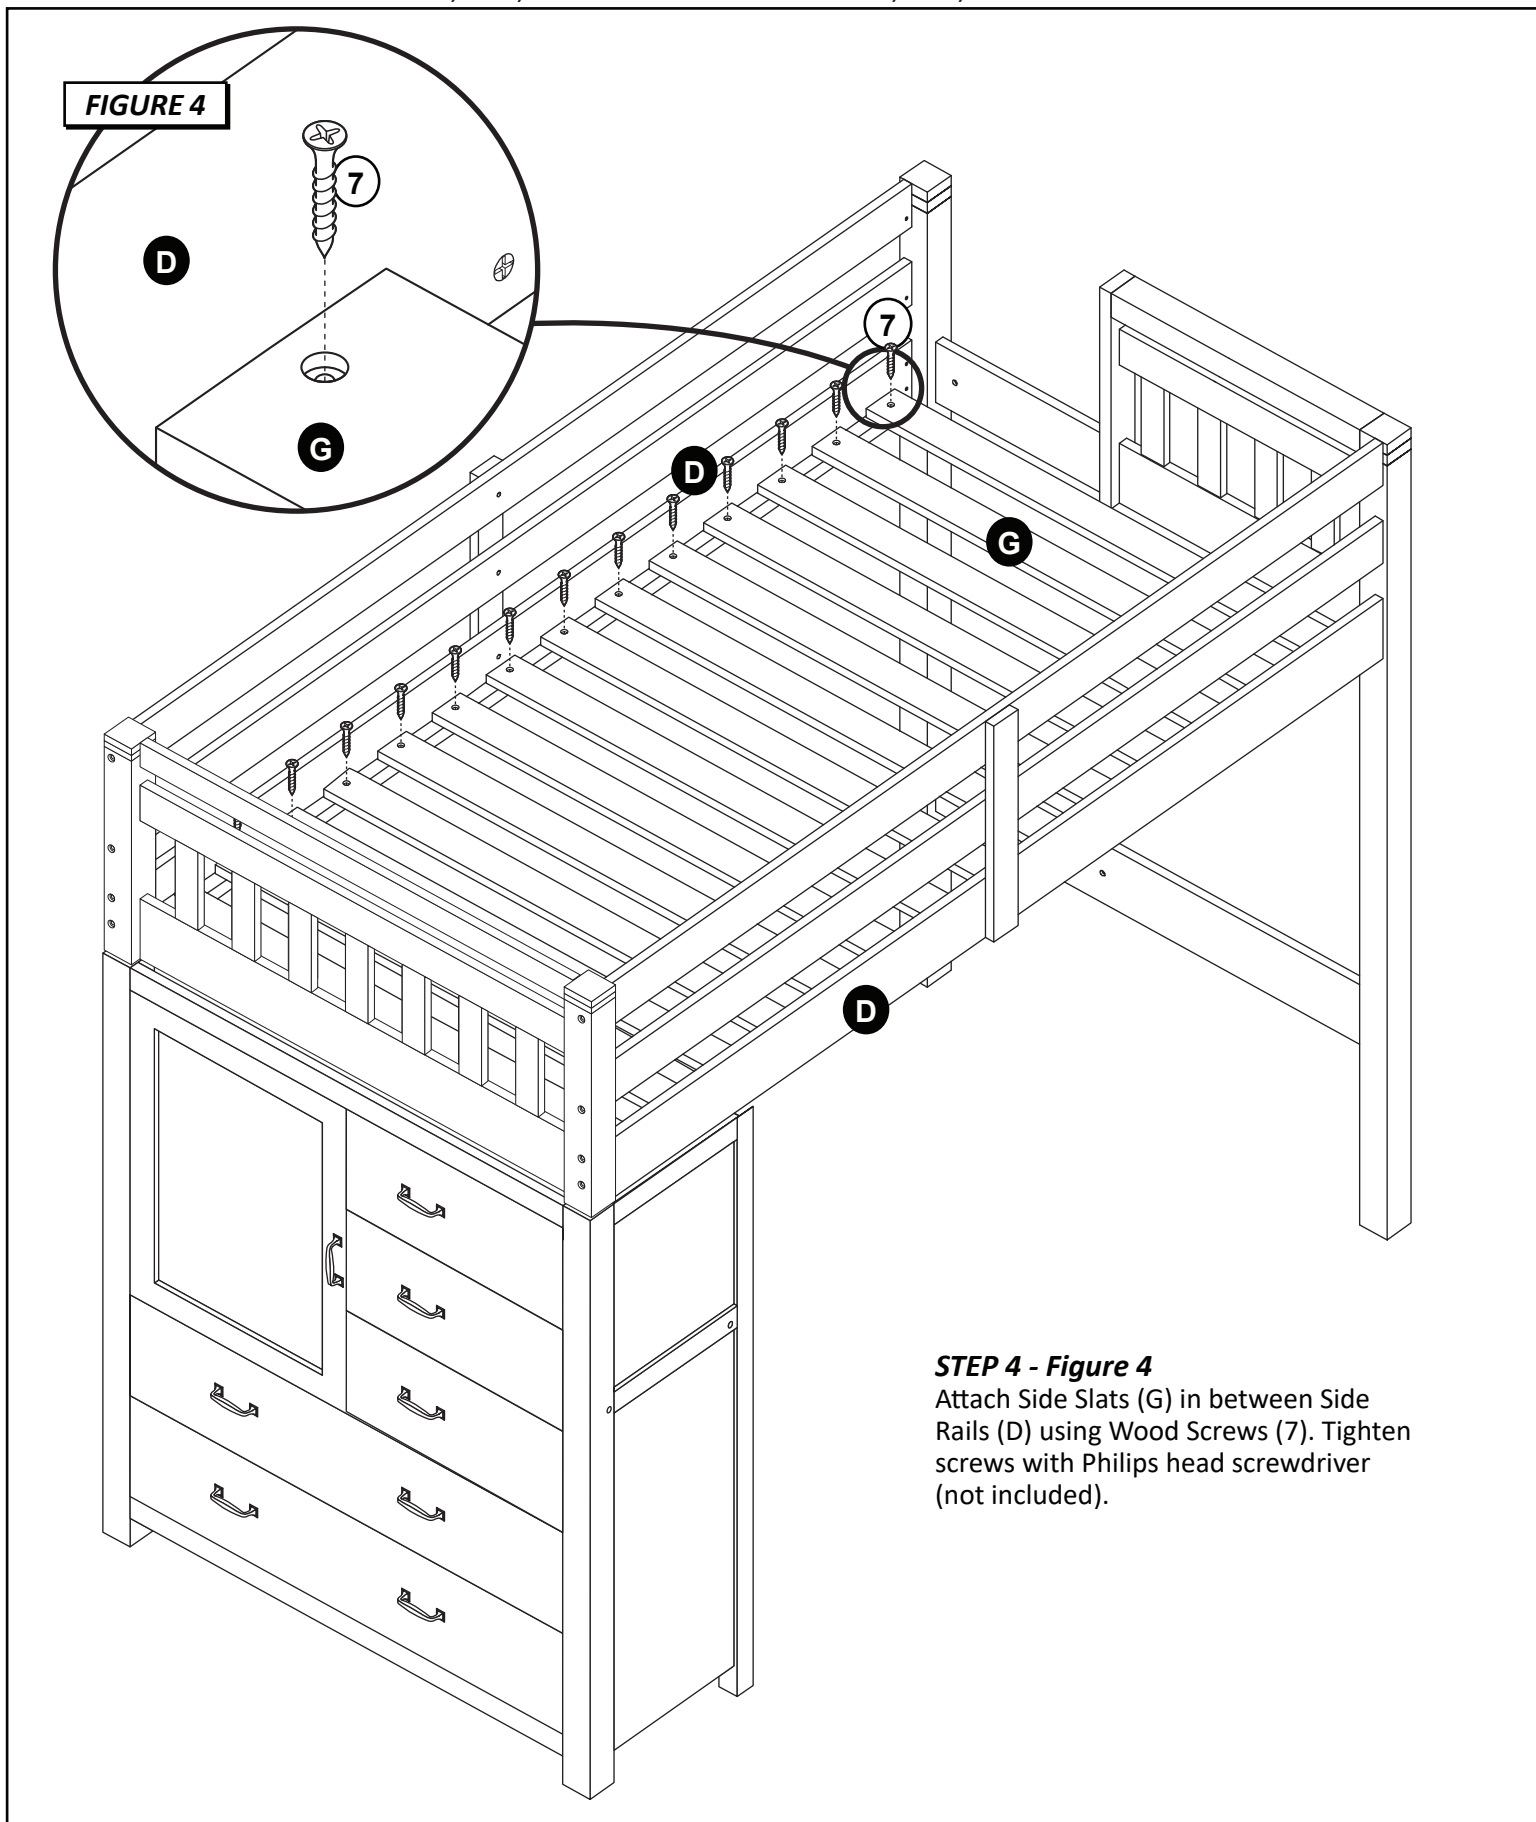

## STEP 4 - Figure 4

Attach Side Slats (G) in between Side Rails (D) using Wood Screws (7). Tighten screws with Philips head screwdriver (not included).

# St. Croix Youth Twin Loft


Model #1987/2229/2230-320 - Headboard & Footboard

Model #1987/2229/2230-321 - Guard Rails & Ladder

Model #1987/2229/2230-352 - Slats • Model #1987/2229/2230-353 - Side Rails

Date: 11-13-2017

Page 6 of 6

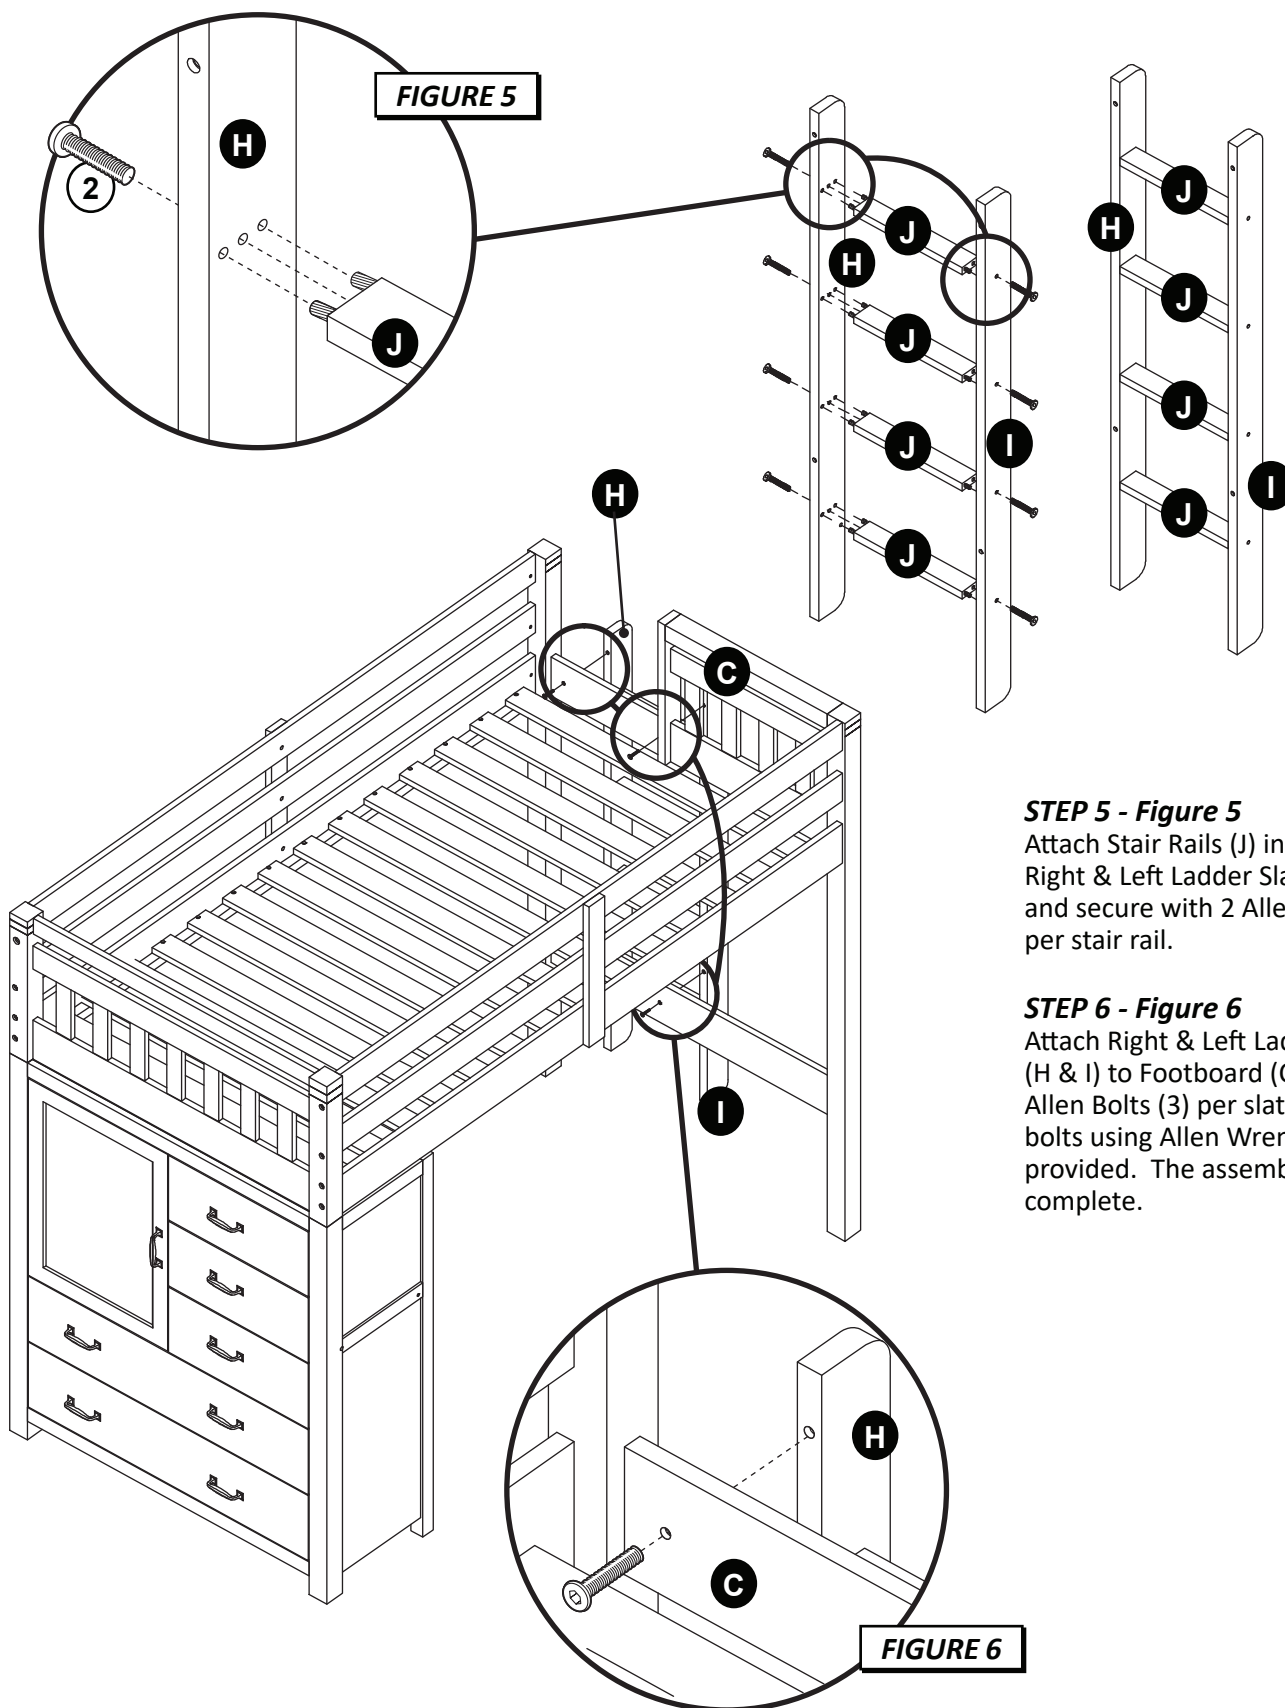

## STEP 5 - Figure 5

Attach Stair Rails (J) in between Right & Left Ladder Slats (H & I) and secure with 2 Allen Bolts (2) per stair rail.

## STEP 6 - Figure 6

Attach Right & Left Ladder Slats (H & I) to Footboard (C) using 2 Allen Bolts (3) per slat. Tighten all bolts using Allen Wrench (8) provided. The assembly is now complete.