


OWNER'S MANUAL

XFB/XSF/SFL Low-profile Bed With Motion Sensor

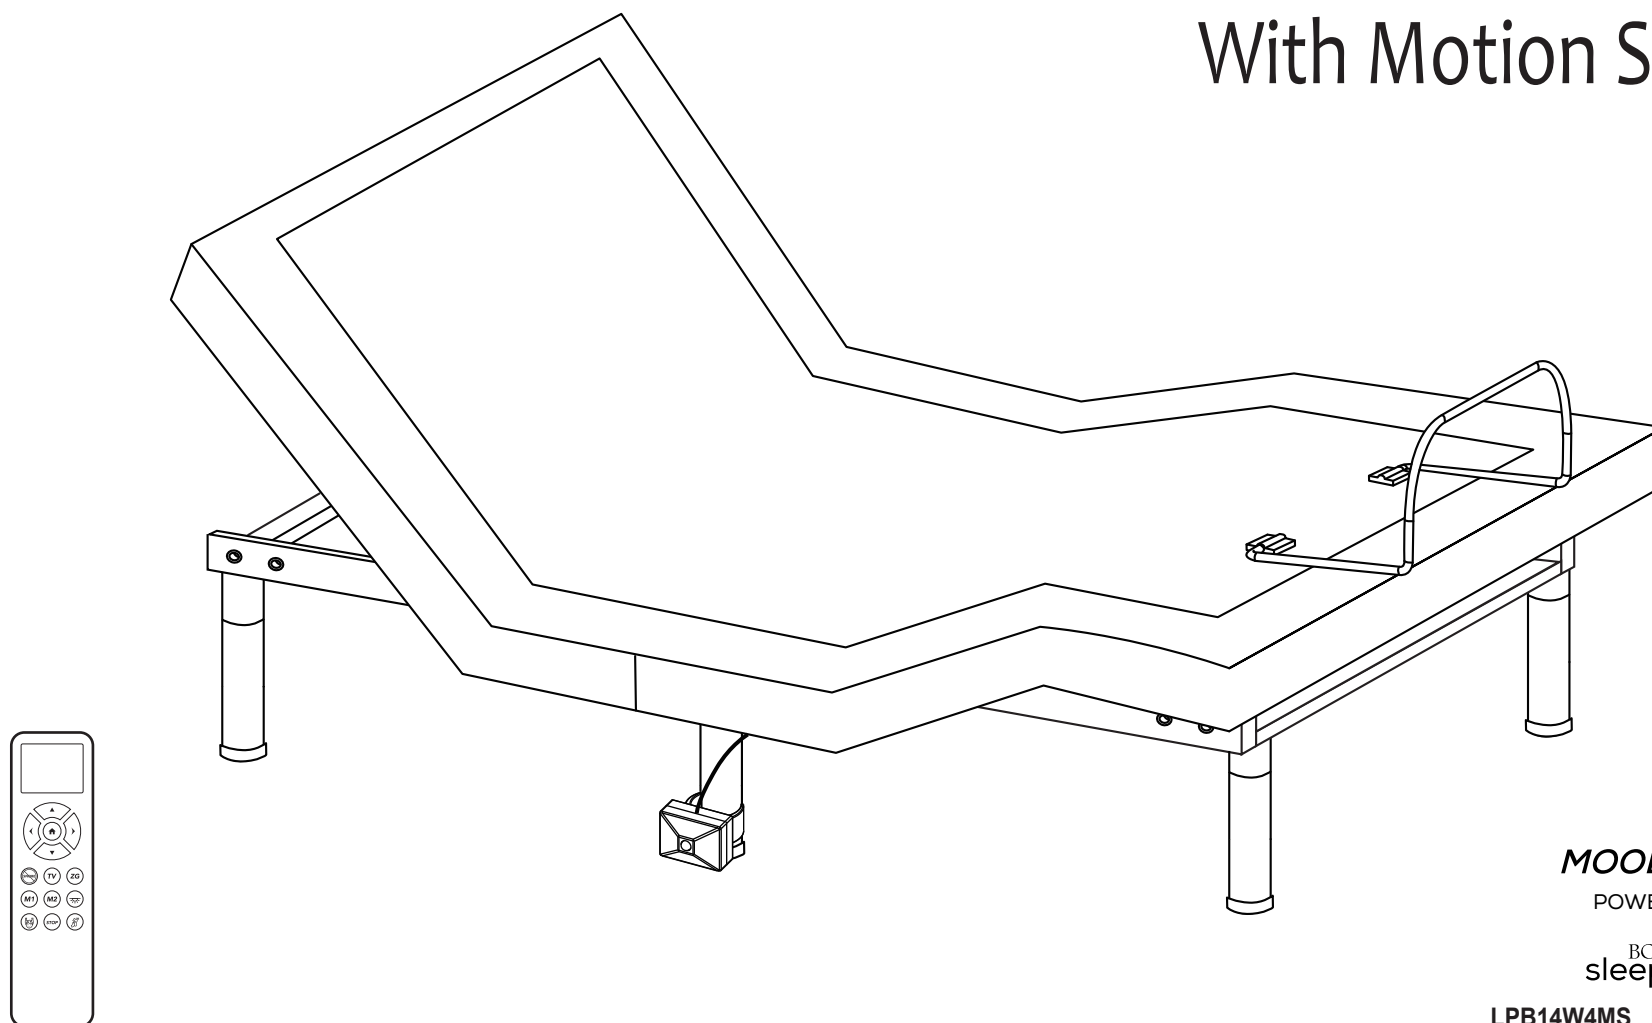

MOOD BASE

POWERED BY


BOB MILLS
sleepspa

LPB14W4MS Rev 1.0 04/2023

Setup the power foundation without the bed frame.

1

Open the box lid.

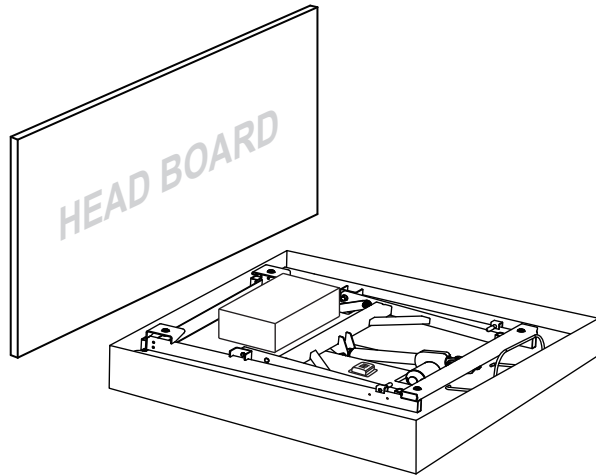

2


Take out all the accessories from the packaging and put them aside. All electronics and components that need to be installed are located in boxes under the foundation or attached to the frame. Before discarding the packing materials, ensure that all the parts are accounted for.

Mattress Retainer Bar



×1(2 for K/CK)

Accessories Box



×1

ACCESSORIES BOX:

Adjustable Legs




×6

Remote Control




×1

Power Supply with Battery Backup Box

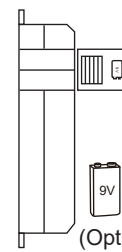

×1

AC Power Cord



×1

Sync Cord (TXL/T/CKS Only)



×1

AAA Batteries



×3

Motion Sensor



×2

Mounting Bracket




×2


3

Remove the red plastic safety lock before unfolding your power foundation.


Remove the red plastic safety clip.

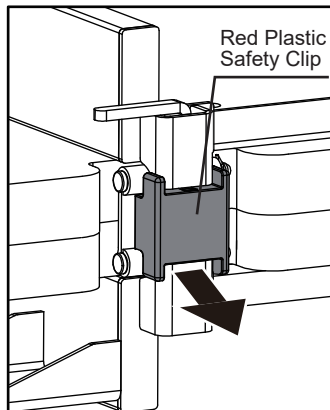

Turn the locking pin 90° in counter clockwise direction.

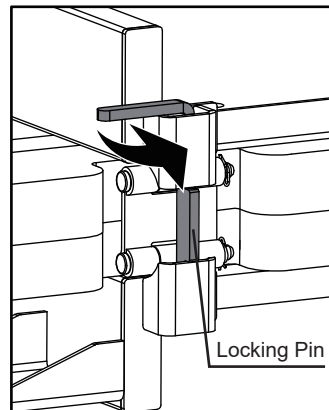


Remove the folding locking pin by pulling upwards.

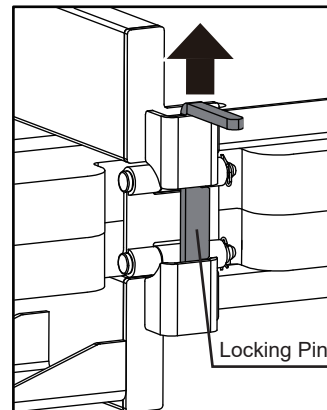


4

Install 4 legs, make sure the legs are tight.

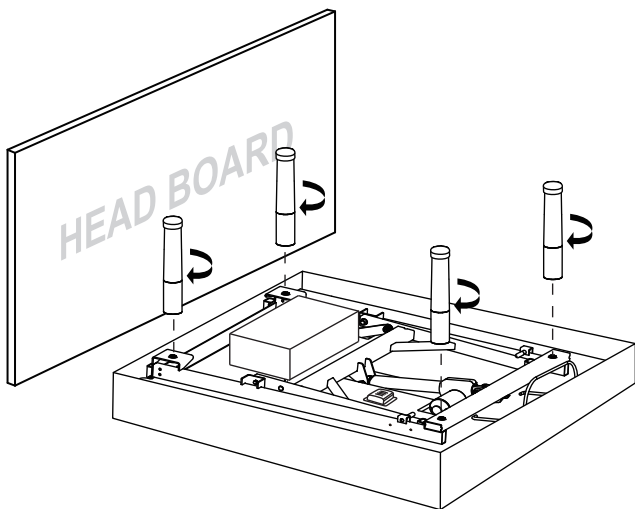


5

Remove the bed from the box with a flipping motion, let the bed stand on the 4 legs.

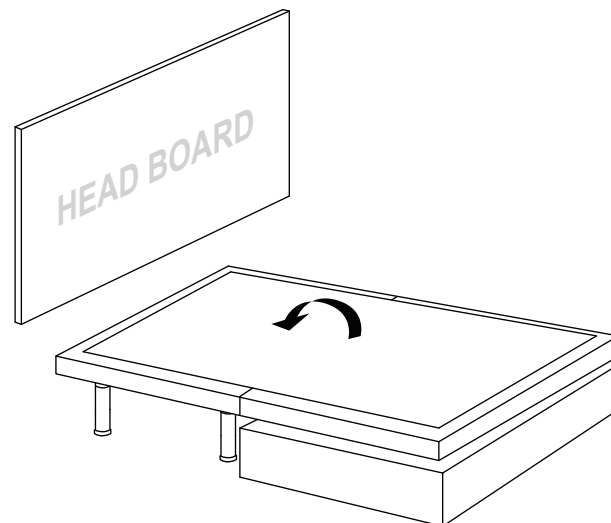


6

Flip the foot end of the bed from the box and lay it on top of the end at the headboard.

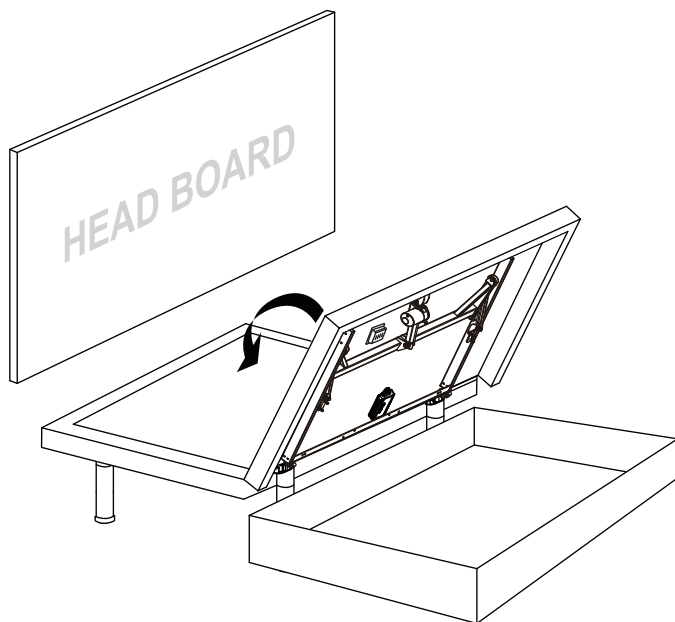


7

Install the remaining 2 legs on the foot end of the bed, make sure the legs are tight. Uncoil the DC power cord (connected to the control box) and put it to the side of the bed.

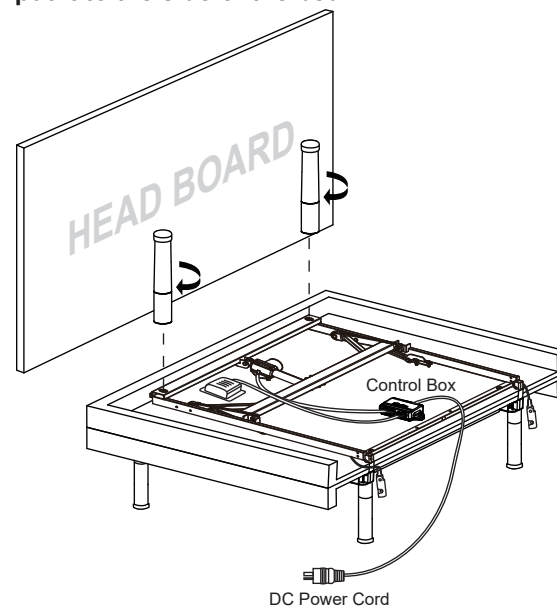


8

Motion sensor installation

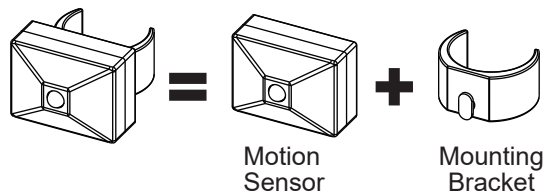


Prepare The Motion Sensor Hardware.


STEP 1: Connect the motion sensor to the mounting bracket.

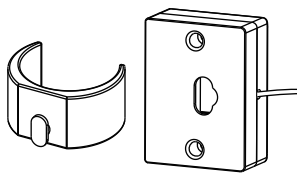

STEP 2: Rotate the mounting bracket 90 degrees clockwise

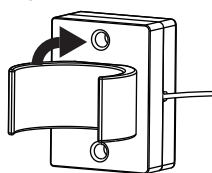


STEP 3:

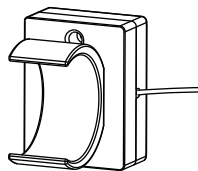




DONE !

Connect The Motion Sensor Connectors.

STEP 1: Clip the mounting bracket onto the center adjustable legs as illustrated.

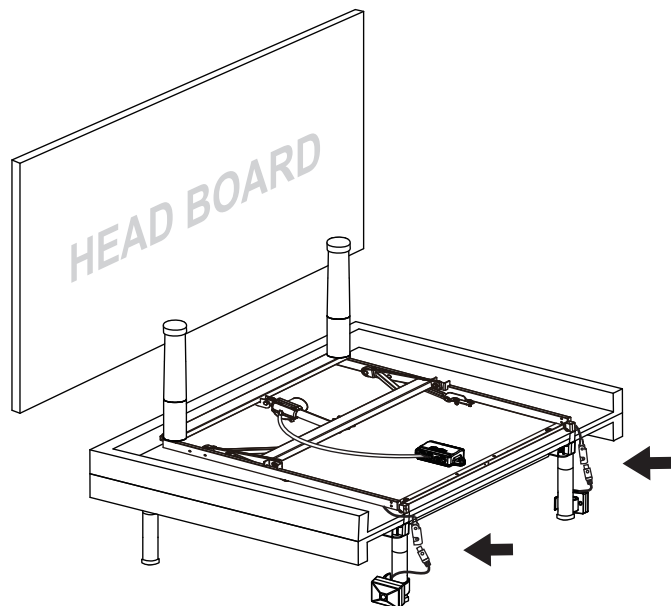


STEP 2: Connect the motion sensor connectors as illustrated. Note there are two connectors, one on each side of the bed.

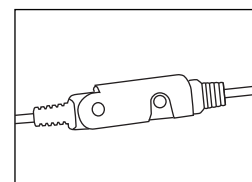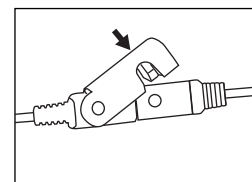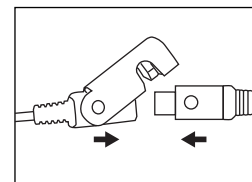


9

Make the bed completely flat.

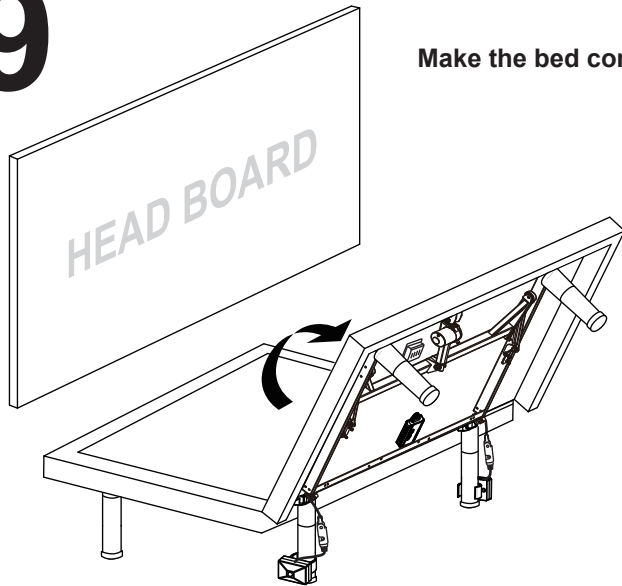

10


Install the mattress retainer bar one side after another.

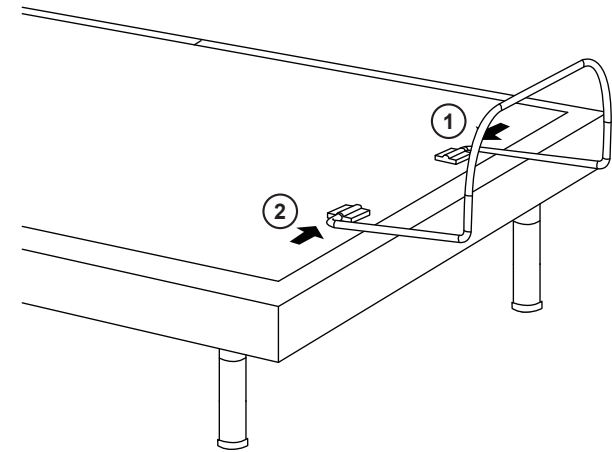

11

Uncoil the AC power cord, connect the DC power cord to the power supply and then connect the power supply to the AC power source.

AC Power Source

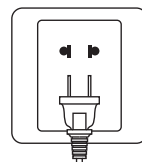


AC Power Cord



Power Supply



DC Power Cord

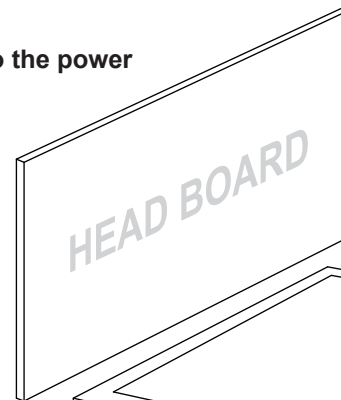

Insert the batteries into the remote control.




DONE!

Setup the power foundation with the bed frame and slat base.


1

Take the bed out of the box, put it on the slat base, do not install any legs.

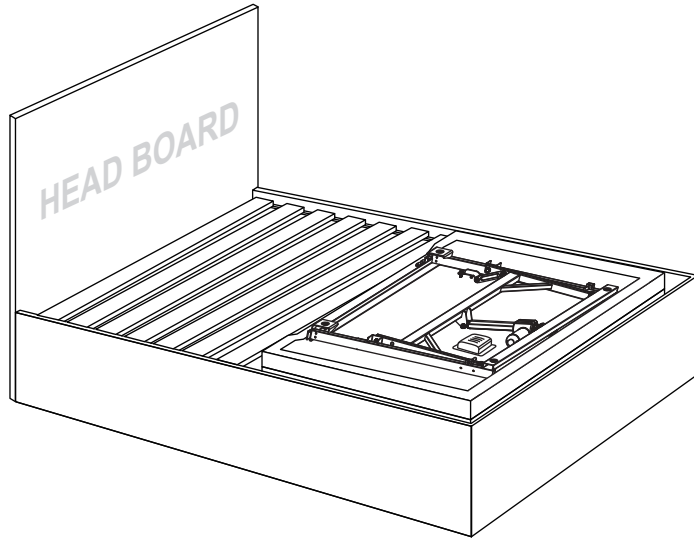

2





Turn over the bed. Uncoil the DC power cord.

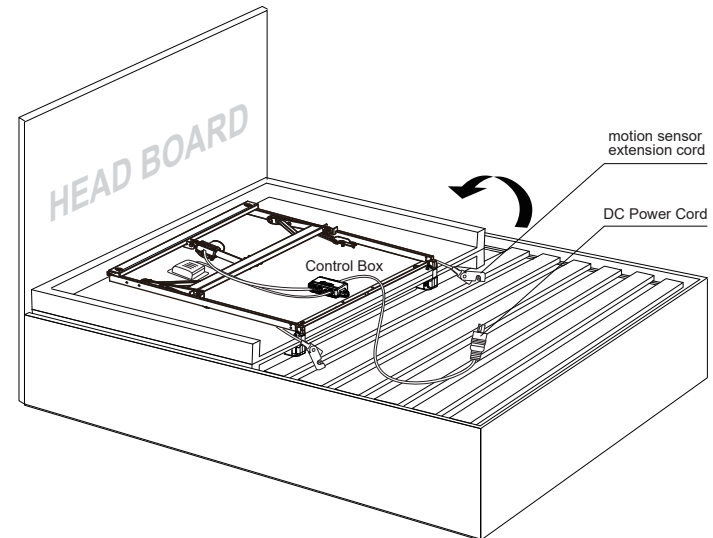


3

Motion sensor installation

STEP 1: Connect the motion sensor connectors as illustrated.

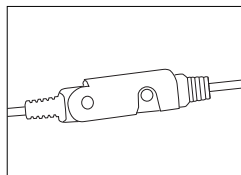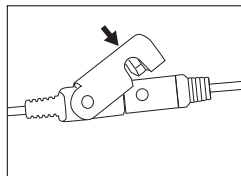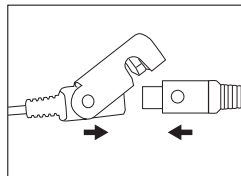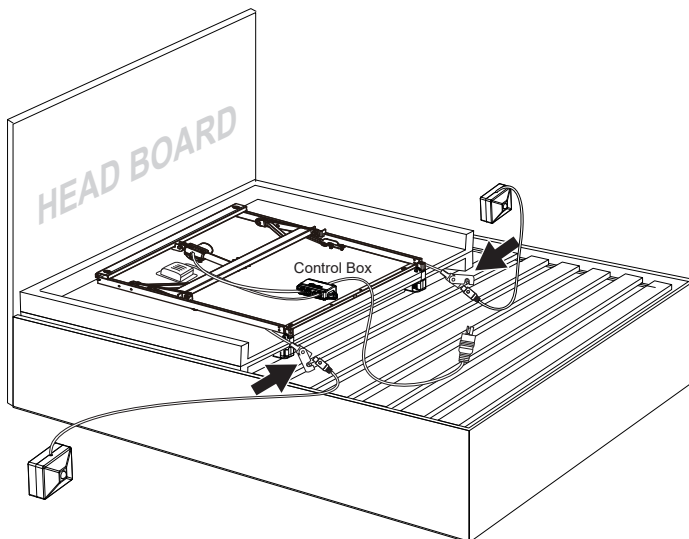


STEP 2: Use the double sided tape to secure the motion sensor when necessary.

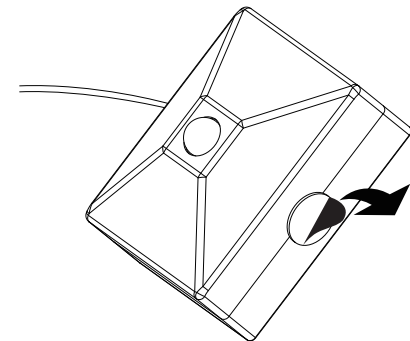


4

Pull the DC power cord towards the direction of the AC power source through either the bottom or the side of the bed frame. Pull the two motion sensors to the two sides of the bed frame. Make the bed completely flat with a flipping motion.

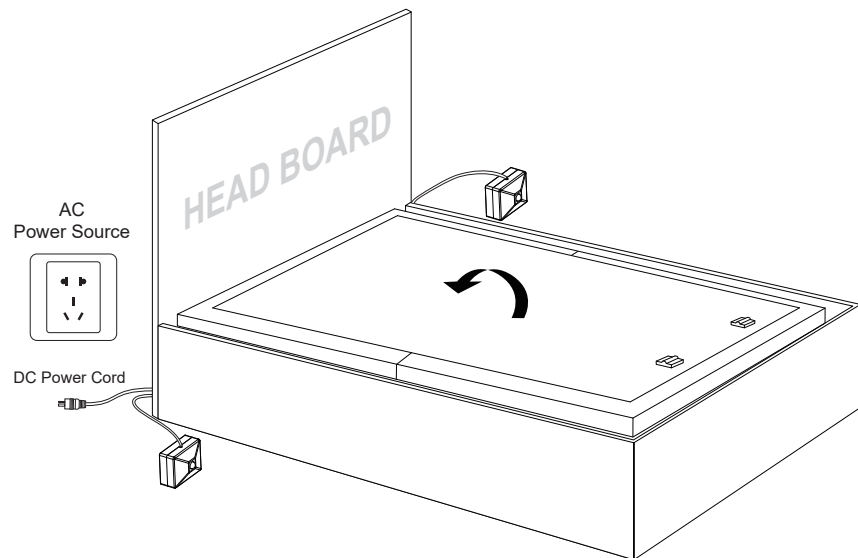


5

Install the mattress retainer bar one side after another.

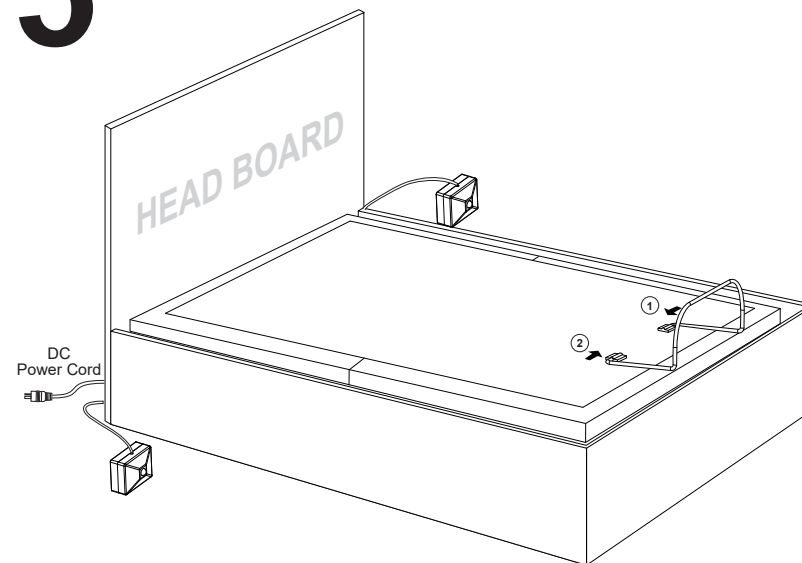


6

Uncoil the AC power cord, connect the DC power cord to the power supply and then connect the power supply to the AC power source.

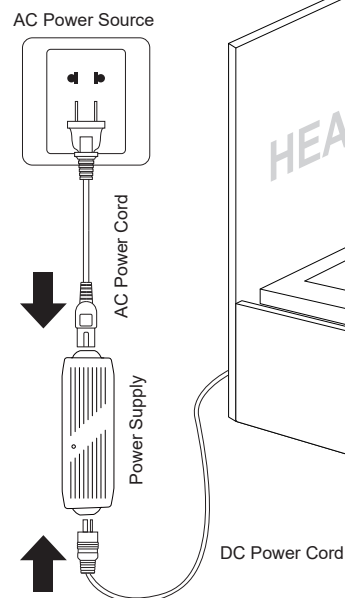


Insert the batteries into the remote control.

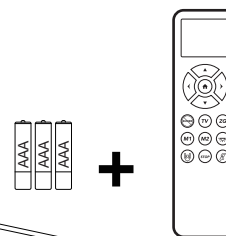


DONE!

Electronics Quick Reference Guide

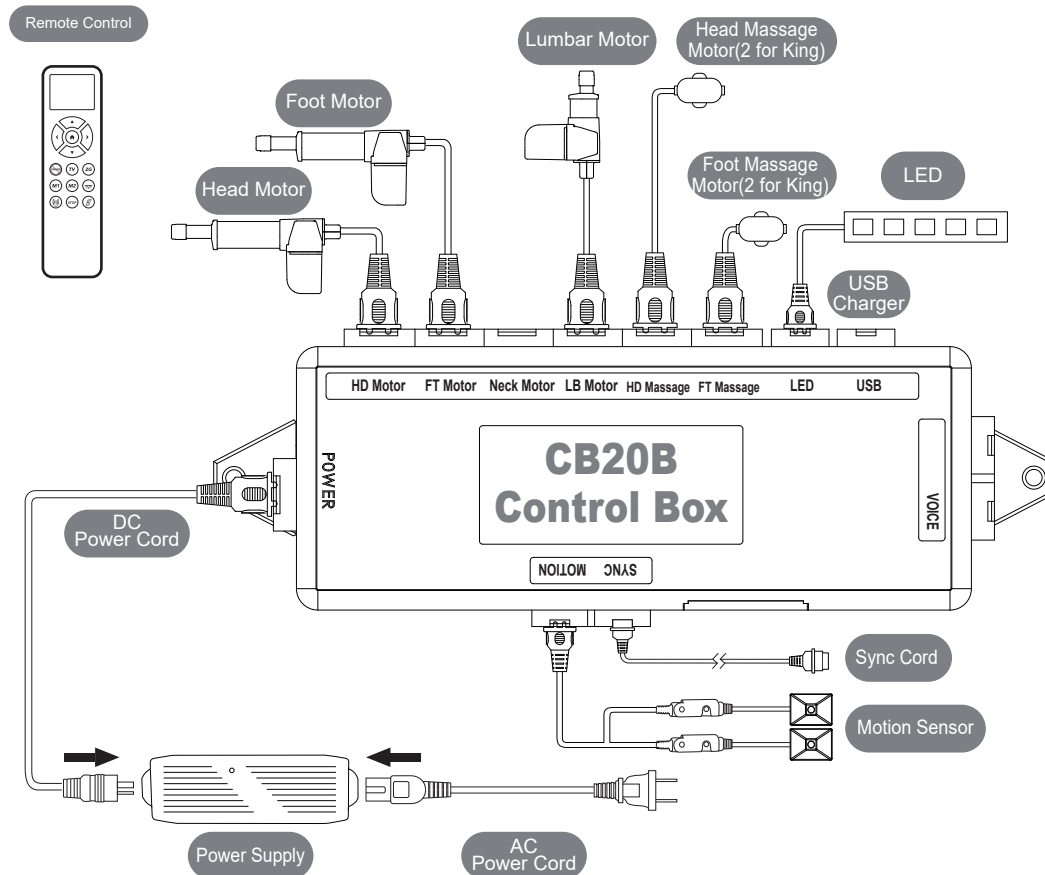


Synchronizing Two Foundations with Sync Cord

- STEP 1: Unplug foundations from the power source.
- STEP 2: Connect the male ends of the sync cord to the female sync plugs of the control boxes (Refer to below illustration).
- STEP 3: Plug foundations back into the power source.
- STEP 4: Check to ensure all cords are securely attached. Either remote will operate both foundations simultaneously.

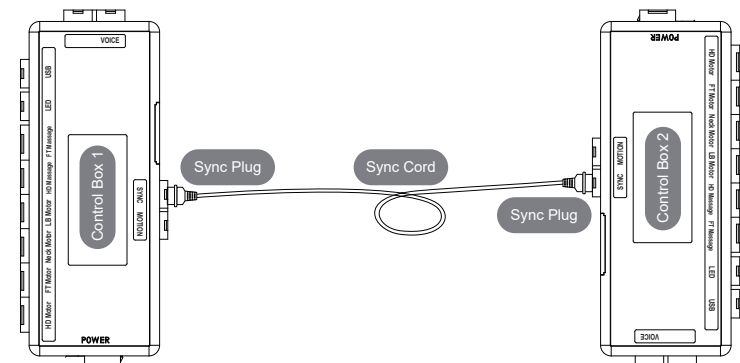

Remote Control Instructions

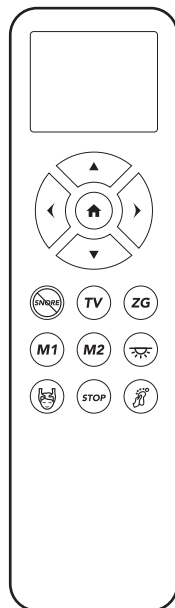

SELECT BUTTON



Press these two button to select Head/Foot/Lumbar zone.

ADJUST



This button lifts the Head/Foot/Lumbar section of the foundation.



This button lowers the Head/Foot/Lumbar section of the foundation.

MASSAGE FEATURES



Turn on the head massage. Cycle through 3 massage intensities.



Turn on the foot massage. Cycle through 3 massage intensities.

STOP Turn off the head/foot massage.

SETTING PROGRAMMABLE POSITION



One-touch programmable positions.

UNDER BED LIGHTING



Under bed LED lighting on/off.

ONE TOUCH BUTTON



One-touch ANTI-SNORE preset position.



One-touch flat position.



One-touch TV preset position.



One-touch ZG preset position. ZG adjusts your legs to a higher level than your heart, helping to relieve pressure of the lower back and promote circulation.

Pairing Remote

The original remote that comes in the box is already paired to the foundation. No further action is required. In the event when the remote is not paired with the foundation, follow the pairing instructions below.

STEP 1: Make sure the batteries are good. Replace them when needed.

STEP 2: Unplug the power cord from the power source. If 9V backup batteries were installed in the power supply, remove them.


STEP 3: Press and hold select buttons ◀ and ▶ until the LCD screen of the remote control shows PAIR.

STEP 4: Plug the power cord back into the power source. You will hear an activation sound in 2 seconds, indicating the remote is paired to the power foundation.



Setting Programmable Position

STEP 1: Adjust the head and foot to your desired position.

STEP 2: Press and hold the LED button  for about 5 seconds until the screen shows SAVE, then press programmable buttons **M1** or **M2**, until you hear 2 beep sounds.

STEP 3: To save a new position, repeat step 1 and 2 and the new position will be saved.

BATTERY LEVEL



The battery icon in the upper-right corner shows the battery level, replace the batteries when the battery level is low.

Mobile APP (Optional)

General Information




Mobile APP is a mobile application to control the Power Foundation with mobile devices. The application is available for both iOS and Android based smart devices.

The Mobile APP uses the latest technology to communicate with your Power Foundation. Make sure your mobile devices has the pairing function for the APP to work correctly.

Install the APP




IOS



- Open APP Store on your IOS device
- Tap the Magnify Glass Icon  and search with the keyword **MOOD BASE**
- Tap on  and  to install the APP
- Wait for the download/installation to be complete

Android




- Open Google Play on your Android device.
- Tap the Magnify Glass Icon  and search with the keyword **MOOD BASE**
- Tap on  and  to install the APP
- Wait for the download/installation to be complete

Device Pairing

Before you start. Switch on the pairing function on your mobile device. Make sure your Power Foundation is correctly connected and is power-on.

The APP will automatically pair your Power Foundation once you start the APP and does not require additional settings.

APP Home Screen

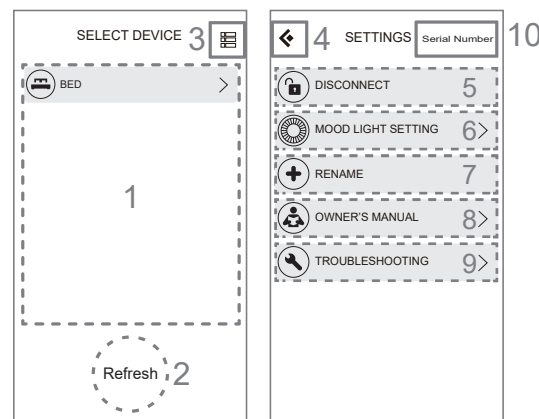


Home Screen

Settings Page

Home Screen	
1	List of products within the connection range*
2	Tap the refresh button to refresh the products list
3	Enter the settings page
Settings Page	
4	Back to the home screen
5	Disconnect from the paired product
6	Choose the light colors, and set up the motion sensor timer
7	Rename your power foundation of your choice
8	Owner's manual page
9	Troubleshooting
10	Serial number of the control box

* The effective connection range is $\pm 10m$

APP Remote Control

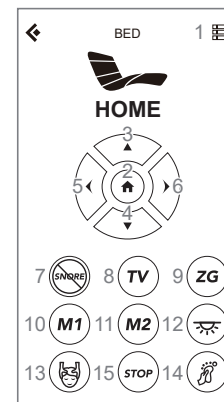

* Remote interface varies in between different Power Foundation models. If you wish to disconnect from the current paired Power Foundation, Enter the Settings Page and tap the Disconnect button.

Remote Control	
1	Enter the settings page
2	One touch flat position
3	Lifting function
4	Lowering function
5	Select head,foot or lumbar section
6	Select head,foot or lumbar section
7	Anti-snore preset position
8	TV position
9	Zero G preset position
10	Programmable position 1
11	Programmable position 2
12	Under bed LED lighting
13	Head massage (3 different intensities)
14	Foot massage (3 different intensities)
15	Massage off button

Legs Installation Guide




Leg Configuration Table				
Leg Configuration				
Leg Height	4 "	7 5/8 "	11 3/8 "	

Support leg may be needed on some slat/platform bed frames, refer to the leg configuration table for height adjustment.

* Make sure the adjustable legs are properly tight, and the plastic caps have been placed at the bottom of the legs. Incorrect installation might cause the part to fail or damage the floor.

STABILIZER BRACKETS COMPONENTS				
(4) Stabilizer Brackets	(8) Screws ST4.2×16	(8) Bolts M8*16	(8) Washers	(1) Socket Wrench

Stabilizer Brackets are optional and not included. They can fix the bed onto the slat base. A phillips screwdriver and socket wrench are required to complete the installation.

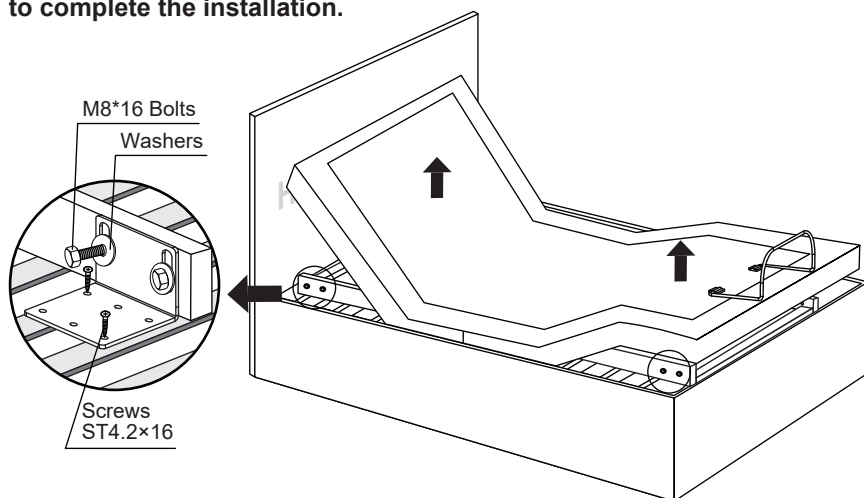

Lift the head and foot end of the bed by remote control. Install four stabilizer brackets as shown. Use a phillips screwdriver and socket wrench to tighten the screws and bolts.

Headboard Bracket Installation Guide (Optional)


Headboard brackets are optional and not included. A 1/2" (13 mm) socket and 1/2" (13 mm) wrench are required to complete the installation.

HEADBOARD BRACKET COMPONENTS				
(2) Headboard Brackets	(2) T-Brackets	(8) M8*16	(4) Nuts	(4) Washers
OPTIONAL EQUIPMENT/PART (NOT INCLUDED)				
<p>Socket and Wrench 1/2" (13mm)</p>				

STEP 1


a)Align the slot hole of the headboard bracket to the sleeve into which the leg threads. **DO NOT OVERTIGHTEN**. Too much force may damage the thread.

b)The headboard bracket has 2 adjustable slots to accommodate any frame type. Use the bolts and washers to secure the bracket. Make sure the bolts are tight.

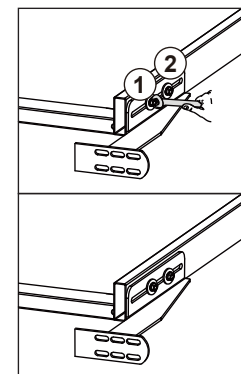

STEP 2

a)To put the T-Bracket and Headboard Bracket together, you will need (2) M8×16 bolts and (2) nuts. Slip the bolts through the holes from T-Bracket to Headboard Bracket with the head of bolt facing outward. Use the 1/2" (13 mm) socket and 1/2" (13mm) wrench to tighten the bolts.

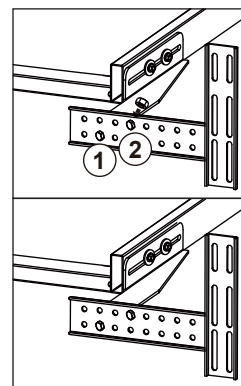


STEP 3

You may now connect your headboard to the attachment plates using the remaining short bolts and nuts to secure it to the brackets. The heads of the bolts will face outward. Use a 1/2" (13mm) socket and 1/2" (13mm) wrench to tighten the bolts.

Spacing Connector for TXL/T/CKS (Optional)

Install two spacing connectors to ensure the gap between the two adjustable bases is consistent.

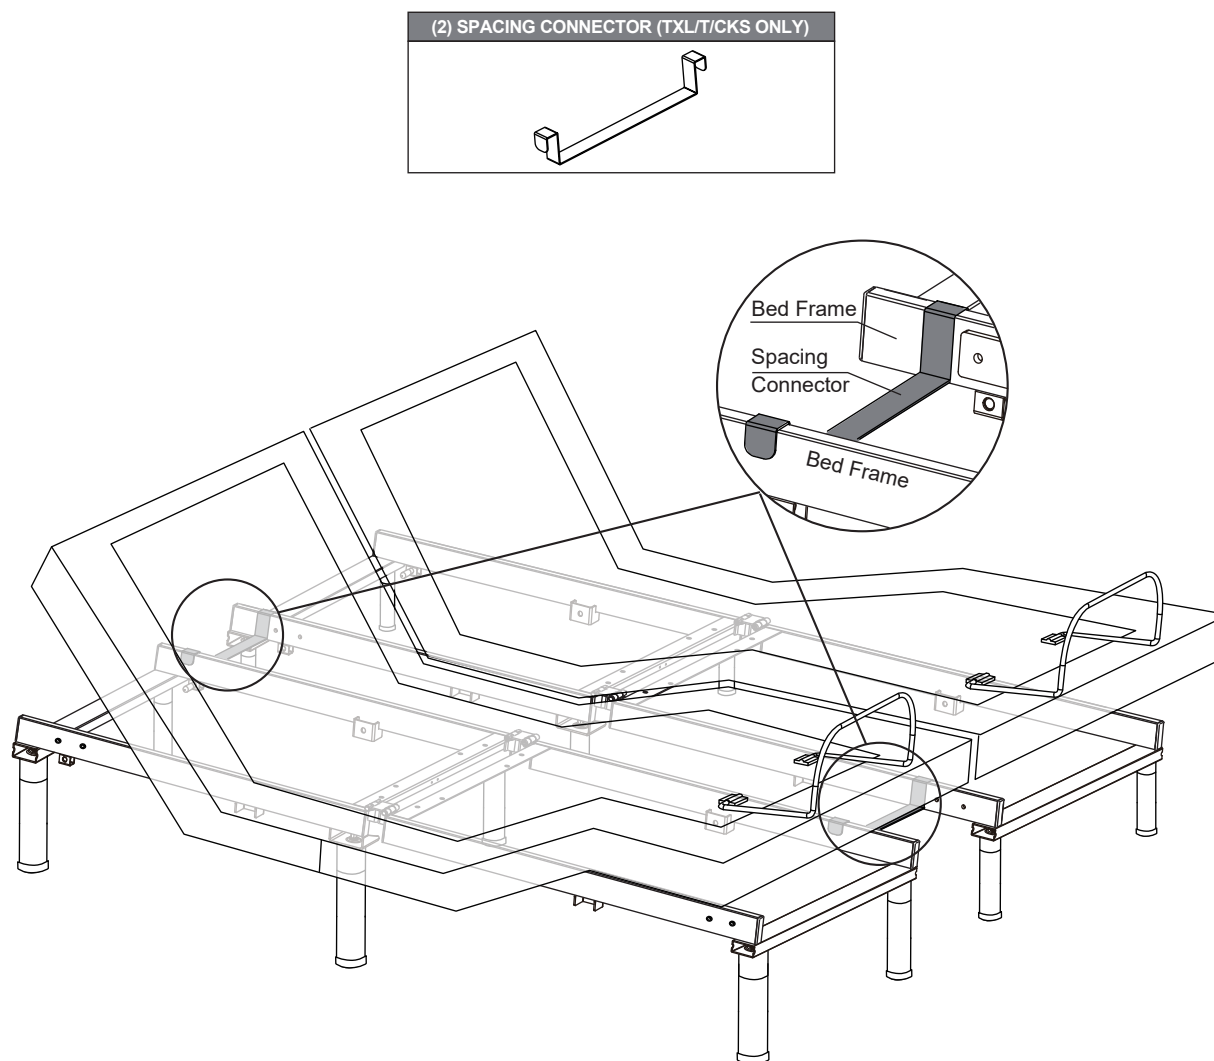

Lift the head and foot end of the bed by remote control. Install the spacing connector as shown.

PRODUCT PROTECTED BY FOLLOWING PATENT:
— US PATENT: 10, 306, 994

Customer Service Toll Free: 1-844-696-6886